



# ANGLER'S LODGE

## SAFE OPERATING INSTRUCTIONS

### TO LOCK:

Close safe door and enter four digit code.  
Press lock button.

### TO UNLOCK:

Re-enter the four digit code.

Please leave safe door slightly ajar upon checkout.

*Thank You!*